


- 1、 Send a password(default password: HF-A11ASSISTHREAD, it can be set by "AT+ASWD") via UDP broadcast (broadcast IP: xx.xx.xx.255, port: 48899)
- 2、 If the password is correct, the module will send its IP address and MAC address to the computer.

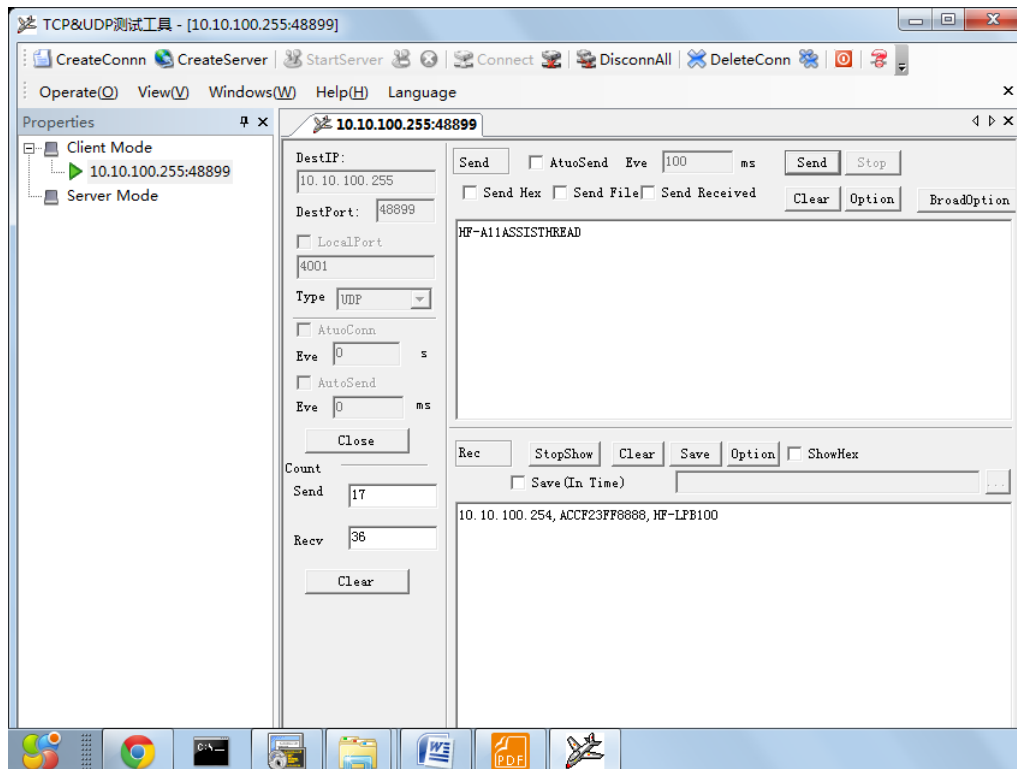

- 3、 Send "+ok" to the module. Then the module can receive and process AT Command via UDP port:48899. If it don't receive any command in 1 minute, it will quit the configure mode(Repeat the step 1,2,3 to enter the mode again). Send "AT+W" to keep the module in this mode and "AT+Q" to quit this mode.

